

DRAFT

United States
Environmental Protection
Agency

Office of Research and
Development
Washington, D.C. 20460

EPA 600-?-06-xxx
December 2005
www.epa.gov/nhsrc



DRAFT

Technology Evaluation Report

Dust Free Bio-Fighter 4Xtreme, Model 21

DRAFT

EPA 600-?-06-xxx
December 2005

DRAFT

Technology Evaluation Report

Dust Free Bio-Fighter 4Xtreme, Model 21

By

Karin Foarde, Deborah Franke, James Hanley,
Kathleen Owen and Tricia Webber
RTI International
3040 Cornwallis Road
Research Triangle Park, NC 27709

Bruce Henschel
Task Order Project Officer
Air Pollution Prevention and Control Division
National Risk Management Research Laboratory
Office of Research and Development
U.S. Environmental Protection Agency
Research Triangle Park, NC 27711

Notice

The U.S. Environmental Protection Agency (EPA), through its Office of Research and Development's National Homeland Security Research Center (NHSRC), funded and managed this technology evaluation through a Blanket Purchase Agreement (BPA) under General Services Administration contract number GS23F0011L-3 with Battelle, with RTI under subcontract to Battelle. This report has been peer and administratively reviewed and has been approved for publication as an EPA document. Mention of trade names or commercial products does not constitute endorsement or recommendation for use of a specific product.

Foreword

The U.S. Environmental Protection Agency (EPA) is charged by Congress with protecting the nation's air, water, and land resources. Under a mandate of national environmental laws, the Agency strives to formulate and implement actions leading to a compatible balance between human activities and the ability of natural systems to support and nurture life. To meet this mandate, the EPA's Office of Research and Development (ORD) provides data and science support that can be used to solve environmental problems and to build the scientific knowledge base needed to manage our ecological resources wisely, to understand how pollutants affect our health, and to prevent or reduce environmental risks.

In September 2002, EPA announced the formation of the National Homeland Security Research Center (NHSRC). The NHSRC is part of the Office of Research and Development; it manages, coordinates, and supports a variety of research and technical assistance efforts. These efforts are designed to provide appropriate, affordable, effective, and validated technologies and methods for addressing risks posed by chemical, biological, and radiological terrorist attacks. Research focuses on enhancing our ability to detect, contain, and clean up in the event of such attacks.

NHSRC's team of world renowned scientists and engineers is dedicated to understanding the terrorist threat, communicating the risks, and mitigating the results of attacks. Guided by the roadmap set forth in EPA's Strategic Plan for Homeland Security, NHSRC ensures rapid production and distribution of security-related products.

The NHSRC has created the Technology Testing and Evaluation Program (TTEP) in an effort to provide reliable information regarding the performance of homeland security related technologies. TTEP provides independent, quality assured performance information that is useful to decision makers in purchasing or applying the tested technologies. It provides potential users with unbiased, third-party information that can supplement vendor-provided information. Stakeholder involvement ensures that user needs and perspectives are incorporated into the test design so that useful performance information is produced for each of the tested technologies. The technology categories of interest include detection and monitoring, water treatment, air purification, decontamination, and computer modeling tools for use by those responsible for protecting buildings, drinking water supplies and infrastructure, and for decontaminating structures and the outdoor environment.

The evaluation reported herein was conducted by RTI International under contract to Battelle as part of the TTEP program. Information on NHSRC and TTEP can be found at <http://www.epa.gov/ordnhsrc/index.htm>.

Acknowledgments

The authors wish to acknowledge the support of all those who helped plan and conduct the evaluation, analyze the data, and prepare this report. We would like to thank _____ and _____ for their reviews of this report. We also acknowledge the assistance and participation of our stakeholder group for their input to the test plan.

Contents

Notice.....	ii
Foreword.....	iii
Acknowledgments.....	iv
Abbreviations/Acronyms	vii
Executive Summary	ix
1.0 Introduction.....	1
2.0 Technology Description.....	3
3.0 Test Procedures	5
3.1 Operation of the Test Duct.....	5
3.2 Preparation and Generation of Bioaerosol Challenges.....	6
3.3 Sampling the Bioaerosols	7
3.4 Bioaerosol Control Efficiency Calculation.....	7
3.5 Calculation of the Average Dose Delivered by the Device	7
4.0 Quality Assurance/Quality Control.....	9
4.1 Equipment Calibration.....	9
4.1.1 Reference Methods.....	9
4.1.2 Instrument Checks.....	9
4.2 Audits.....	9
4.2.1 Performance Evaluation Audit.....	9
4.2.2 Technical Systems Audit	9
4.2.3 Data Quality Audit.....	10
4.3 QA/QC Reporting.....	10
5.0 Test Results.....	11
6.0 Performance Summary.....	12
7.0 References.....	13

Figures

Figure 2-1. Ballast box installed on the outside of the test rig	4
Figure 2-2. Lamp installed inside the test rig	4
Figure 3-1. Schematic of Test Duct. UV system is placed in device section	5

Tables

Table 2-1. Specifications of the Bio-Fighter 4Xtreme, Model 21.....	3
Table 4-1. DQOs for Biological Aerosols.....	10
Table 5-1. Inactivation Efficiency.....	11
Table 5-2. Other information for the Bio-Fighter 4Xtreme, Model 21 Test.....	11

Abbreviations/Acronyms

A	ampere
ANSI	American National Standards Institute
ARTI	Air-Conditioning and Refrigeration Technical Institute
ASHRAE	American Society of Heating, Refrigerating and Air Conditioning Engineers, Inc.
ATCC	American Type Culture Collection
<i>B</i>	<i>Bacillus</i>
BG	<i>Bacillus atrophaeus</i> (formerly <i>B. subtilis var niger</i> and <i>Bacillus globigii</i>)
BWA	biological warfare agent
°C	degrees Celsius
cfm	cubic feet per minute
CFU	colony forming unit(s)
cm	centimeter(s)
DQO	data quality objective
EPA	U.S. Environmental Protection Agency
°F	degrees Fahrenheit
fpm	feet per minute
ft	feet
HVAC	heating, ventilation and air-conditioning
in.	inch(es)
J	joule
KCl	potassium chloride
m	meter(s)
mL	milliliter(s)
μm	micrometer(s)
μW	microwatts(s)
NEMA	National Electrical Manufacturers Association
nm	nanometer(s)
NHSRC	National Homeland Security Research Center (EPA)
QA	quality assurance
QC	quality control
OPC	optical particle counter
ORD	Office of Research and Development (EPA)
Pa	pascal(s)
PE	performance evaluation

DRAFT

PFU	plaque forming unit(s)
psig	pounds per square inch gauge
QMP	quality management plan
QSA	quality system assessment
RTI	Research Triangle Institute (RTI International)
<i>S</i>	Serratia
sec	second(s)
TSA	technical system assessment
TTEP	Technology Testing and Evaluation Program
UV	ultraviolet, the C band is used for disinfection
V	volt(s)
W	watt(s)

Executive Summary

The U.S. Environmental Protection Agency's (EPA's) National Homeland Security Research Center (NHSRC) Technology Testing and Evaluation Program (TTEP) is helping to protect human health and the environment from adverse impacts resulting from acts of terror by carrying out performance tests on homeland security technologies. Under TTEP, RTI recently evaluated the performance of the Dust Free Bio-Fighter 4Xtreme, Model 21. The objective of testing the Bio-Fighter 4Xtreme, Model 21 was to evaluate its bioaerosol inactivation efficiency as a heating, ventilation and air-conditioning (HVAC) in-duct ultraviolet light system.

The product was tested using a test plan approved by EPA, *Test/QA Plan for Biological Inactivation Efficiency by HVAC In-Duct Ultraviolet Light Air Cleaners*.⁽¹⁾ The tests were conducted using three organisms, two bacteria (*Bacillus atrophaeus* and *Serratia marcescens*) and one bacterial virus (MS2). To model use in an HVAC system, RTI used a test duct designed for testing filtration and inactivation efficiencies of aerosol, bioaerosol and chemical challenges.

The inactivation efficiencies calculated for the three organisms were 4% for *B. atrophaeus*, 99% for *S. marcescens* and 39% for MS2. The irradiance was measured as 310 $\mu\text{W}/\text{cm}^2$ at 162 cm (63 in.) from the lamp with airflow 0.93 m^3/sec (1970 CFM).

1.0 Introduction

The U.S. Environmental Protection Agency's (EPA's) National Homeland Security Research Center (NHSRC) is helping to protect human health and the environment from adverse impacts resulting from intentional acts of terror. With an emphasis on decontamination and consequence management, water infrastructure protection, and threat and consequence assessment, NHSRC is working to develop tools and information that will help detect the intentional introduction of chemical or biological contaminants in buildings or water systems, the containment of these contaminants, the decontamination of buildings and/or water systems, and the disposal of material resulting from cleanups.

NHSRC's Technology Testing and Evaluation Program (TTEP) works in partnership with recognized testing organizations; with stakeholder groups consisting of buyers, vendor organizations, and permittees; and with the full participation of individual technology developers in carrying out performance tests on homeland security technologies. The program evaluates the performance of innovative homeland security technologies by developing test plans that are responsive to the needs of stakeholders, conducting tests, collecting and analyzing data, and preparing peer-reviewed reports. All evaluations are conducted in accordance with rigorous quality assurance (QA) protocols to ensure that data of known and high quality are generated and that the results are defensible. TTEP provides high-quality information that is useful to decision makers in purchasing or applying the tested technologies. It provides potential users with unbiased, third-party information that can supplement vendor-provided information. Stakeholder involvement ensures that user needs and perspectives are incorporated into the test design so that useful performance information is produced for each of the tested technologies.

UV lamps have been used to inactivate airborne microorganisms for many years. Much of the early work was directed at the control of very infectious microorganisms (particularly *Mycobacterium tuberculosis*, the causative agent of tuberculosis), often in medical facilities. Wavelengths within the short wave, or C band of UV light (UVC), were found to be the most effective germicidal light wavelengths. UVC is usually generated by use of UVC fluorescent lamps. These lamps use electrical discharge through low-pressure mercury vapor enclosed in a glass tube that transmits UVC light (primarily at the mercury wavelength of 253.7 nm). Because this wavelength has been found to be about the optimum for killing microorganisms, UVC from mercury lamps is also referred to as UVG to indicate that it is germicidal. UVG has been shown to inactivate viruses, mycoplasma, bacteria, and fungi when used appropriately.

Numerous past studies of UVC to inactivate microorganisms have been conducted for a variety of purposes and with a variety of methods. No standard method exists for

evaluating culturable bioaerosol inactivation by these devices. However, as part of the project entitled, “Defining the Effectiveness of UV Lamps Installed in Circulating Air Ductwork” funded by the Air-Conditioning and Refrigeration Technology Institute (ARTI), RTI developed a test method for measuring culturable bioaerosol inactivation efficiencies by UV lights.⁽²⁾ This method was derived from earlier bioaerosol air cleaner test methods developed for determining the bioaerosol filtration efficiencies of various air cleaning devices including from room air cleaners and duct-mounted ventilation filters to.^(3,4,5) These bioaerosol methods were based on RTI’s extensive experience in the development of particulate testing methods of various air cleaning devices.

The current TTEP effort focuses on UV systems that are mounted in the HVAC ducting (in-duct UV light systems) and that operate on a “fly-through” basis. That is, they are designed to destroy bioaerosols in the flowing air stream as it passes through the device. This is distinguished from UV devices that are designed to treat specific surfaces within the HVAC system, in particular, the cooling coils and the condensate drain pan, to prevent biological growth on those surfaces. Only airborne inactivation of bioaerosols was tested. Surface inactivation was not evaluated.

The bioaerosol tests were conducted using three organisms, consisting of two bacteria (spore-forming *Bacillus atrophaeus* and the vegetative bacterium *Serratia marcescens*) and one bacterial virus (MS2) that cover the range of potential interest for biological warfare agent (BWA) applications. These organisms were selected because their sizes, shapes and susceptibility to UV inactivation make them reasonable surrogates for BWAs. Generally, vegetative bacteria are readily killed and bacterial spores are more difficult. The spore form of the bacteria *Bacillus atrophaeus* (formerly *B. subtilis var niger* and *Bacillus globigii* or BG) was used as the surrogate for gram-positive spore-forming bacteria. The BG spore is elliptically shaped with dimensions of 0.7 to 0.8 by 1 to 1.5 μm . *Serratia marcescens* was used as the surrogate for rod-shaped gram-negative bacteria. *S. marcescens* is 0.5 to 0.8 by 0.9 to 2.0 μm .

The bacterial virus (bacteriophage) MS2, having approximately the same aerosol characteristics as a human virus, was used as a surrogate for the viruses of similar and larger size and shape. Although the individual virus particles are in the 0.02 – 0.03 μm size range, the test particle size for the virus tests spanned a range of sizes (polydispersed bioaerosol) in the micron range. This test was not designed to study the inactivation efficiencies for individual virus singlets; rather, it was designed to determine the inactivation efficiencies for virus particles as they are commonly found indoors. A representative challenge would be a polydispersed aerosol containing the phage because:

- The aerosols created from sneezing and coughing vary in size from < 1 to 20 μm , but the largest particles settle out and only the smaller sizes remain in the air for extended periods for potential removal by an air cleaner;⁽⁶⁾
- For some viruses (e.g., Coxsackie virus), few viruses have been found associated with the smallest particles;⁽⁷⁾ and
- Nearly all 1 - 2 μm particles are deposited in the respiratory tract, while larger particles may not be respired.

2.0 Technology Description

The information in this section was provided by the vendor and was not evaluated by RTI.

The Bio-Fighter 4Xtreme, Model 21 is a UV light system designed for indoor or outdoor use and has a fully enclosed NEMA (National Electrical Manufacturers Association) 4X UV fixture. The device consists of a single mercury lamp inserted through the side of the duct, perpendicular to the air flow. The lamp used for this test was 53 cm (21in.) long; there are also 84 cm (33in.) and 114 cm (45in.) lengths for use in large ducts. The ballast can use either 120 or 240 V; in this test, 120V was used. Table 2-1 provides information on the system as supplied by the vendor. Figures 2-1 and 2-2 provide views of the device as tested, installed in accordance with the manufacturer's specifications. The device used a model #06180, 21" 4Xtreme lamp.

Table 2-1. Specifications of the Bio-Fighter 4Xtreme, Model 21

Attribute	Specification
Wattage for the lamp	58 W
Rated output of the lamp	720 $\mu\text{w}/\text{cm}^2$ measured at 30 cm (12 in.), 10 °C (50 °F), 61 cm x 61 cm (24 in. x 24 in.) duct, 0.24 m^3/sec (500 fpm)
Total UV-C power for the lamp (watts)	19 UV Watts
Irradiance (output) of the lamp, give distance and other information (e.g. airflow) (W/cm^2)	720 $\mu\text{w}/\text{cm}^2$ measured at 30 cm (12 in.), 10 °C (50 °F), 61 cm x 61 cm (24 in. x 24 in.) duct, 0.24 m^3/sec (500 fpm)
Dosage (J/cm^2 or $\text{W}\cdot\text{s}/\text{cm}^2$)	7200 $\text{mw} / \text{sq. cm}$ @ 10 second dwell time
Ballast root mean square voltage and current	120 V, 0.45 A
Dimensions of the lamp	53.3 cm (21 in.), 1.9 cm (0.75 in.) diameter (T6),
Dimensions of the ballast box	29.4 cm (11.5 in.) x 20.3 cm (8 in.) x 10.9 cm (4.3 in.)
Configuration	Ballast box is on the outside of the HVAC duct, with a single lamp inside (see Figures 1 and 2)
Other lamp characteristics that could impact E_{eff}	None; no reflective material in duct

DRAFT



Figure 2-1. Ballast box installed on the outside of the test rig.



Figure 2-2. Lamp installed inside the test rig.

For more information on the Bio-Fighter 4Xtreme, Model 21, contact:

Gregg Burnett
Dust Free
Po Box 519
1112 Industrial
Royse City, TX 75189
gburnett@dustfree.com
www.dustfree.com
1-800-441-1107
1-800-929-9712 FAX

3.0 Test Procedures

3.1 Operation of the Test Duct

The testing was conducted in the test duct shown schematically in Figure 3-1. The test section of the duct is 0.61 m by 0.61 m (24 in. by 24 in.). The locations of the major components, including the sampling probes, the device section (where the UV device is installed), and the aerosol generator (site of bioaerosol injection) are shown. The test duct is operated following procedures in the ANSI/ASHRAE (American National Standards Institute/American Society of Heating, Refrigerating and Air-Conditioning Engineers) Standard 52.2-1999, *Method of Testing General Ventilation Air-Cleaning Devices for Removal Efficiency by Particle Size*.⁽⁸⁾

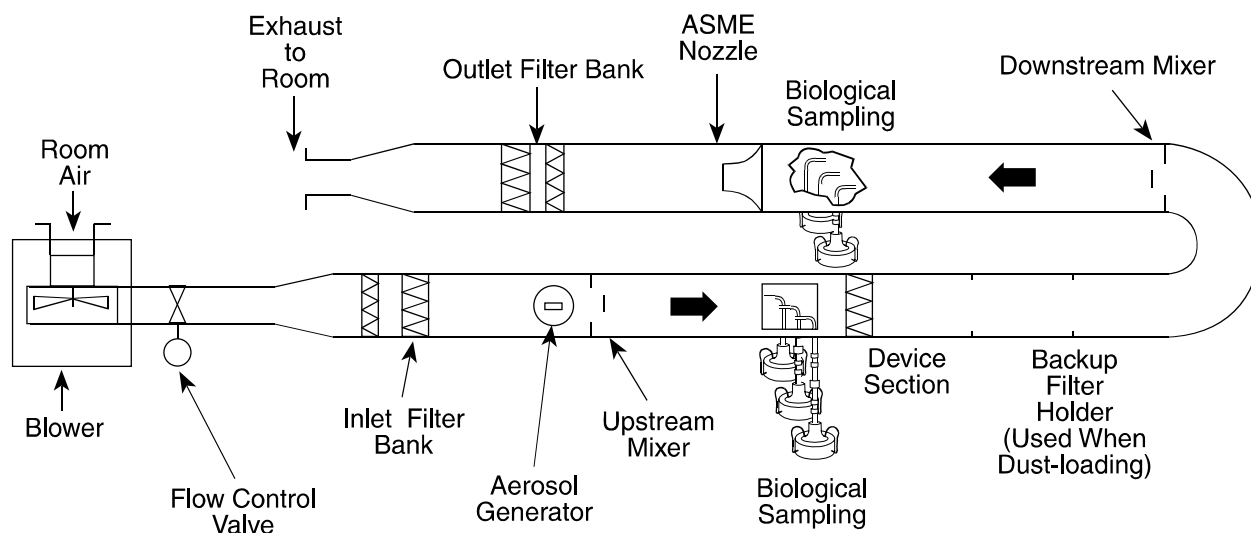


Figure 3-1. Schematic of Test Duct. UV system is placed in device section.

While Figure 3-1 shows the test duct without recirculation, during testing, the duct may be operated with or without recirculation. The decision for recirculation mode is based on building HVAC considerations. Because of the HEPA filters at the beginning and the end of the duct, the recirculation mode does not affect the test data as long as all other criteria are met.

The air flow rate through the duct during this testing was 0.93 m³/sec (1970 cfm). This flow creates a typical air velocity in the duct, and has been used extensively in prior testing of air cleaning devices in this rig. The air temperature entering the device was

approximately 23 °C. Air flow rate and temperature can have an impact on lamp performance, and the values used in this testing are consistent with vendor specifications.

Prior to testing the device, the UV lamps were operated for a standard 100-hr “burn-in” period.

In a given run, one of the three challenge bioaerosols – prepared as described in Section 3.2 below – was injected upstream of the device. A no-light test was performed with the UV lights turned off, to determine the microorganism loss that would occur simply as the result of deposition in the test duct, and as the result of kill caused by the physical rigors of flowing through the device. As discussed later, the performance of the device was then reported as the device’s efficiency in inactivating the organism with the light on, corrected to account for the loss of organisms observed in the absence of UV light.

In addition to the measurement of the concentration of culturable organisms upstream and downstream of the device, other measurements that were made include:

- The energy required to operate the unit, including the direct total power consumption by the lamp and ballast, the pressure drop across the device (impacting air handler requirements), and the temperature rise through the unit, if any (impacting cooling coil energy consumption).
- A single measurement of the intensity of 254 nm UV radiation (W/cm^2) at a point 162 cm (63 in.) from the lamp, to verify the rated output of the lamp.

3.2 Preparation and Generation of Bioaerosol Challenges

The bioaerosol tests were conducted using three organisms, two bacteria (*Bacillus atrophaeus* and *Serratia marcescens*) and one bacterial virus (MS2). Section 1 discusses the selection of the bioaerosols.

The microbial challenge suspensions were prepared by inoculating the test organism onto solid or into liquid media, incubating the culture until mature, wiping organisms from the surface of the pure culture (if solid media), and eluting them into sterile fluid to a known concentration to serve as a stock solution. The organism preparation was then diluted into sterile nebulizing fluid. The nebulizing fluid was composed of salts (buffering), peptone and antifoam (*S. marcescens* only). The composition of the nebulizing fluid should have provided a protective effect similar to organic matter (dirt, debris, etc.) for the *S. marcescens* and possibly the MS2 against the inactivation of the UVC. Based on the ARTI study, little or no effect was anticipated for the *B. atrophaeus* as spores were found to be relatively unaffected by protective factors.⁽²⁾ The nebulizing fluid was quantified on trypticase soy agar to enumerate the bacteria.

The phage challenge was prepared by inoculating a logarithmic phase broth culture of the host bacteria (*E. coli*) with phage and allowing it to multiply overnight or until the majority of the host bacteria were lysed. The mixture was processed to collect and

concentrate the phage. Then, the phage stock was filter sterilized (0.2μ) to remove the bacteria. The phage stock was used as the challenge aerosol. The concentration of the phage stock was approximately 1×10^9 or higher plaque forming units (PFU)/mL. The virus assay used a standard double agar layer plaque assay, in which host cell *Escherichia coli* C3000 (ATCC 15597) in the log phase of growth and serial dilutions of the MS2 virus stock (ATCC15597-B1) were combined and top agar added and then poured onto bottom agar plates.⁽⁹⁾ After incubation, at least overnight, at 37°C plaques (loci of infection) were counted against an opaque lawn of host cell *E. coli* C3000.

The challenge organism suspensions were aerosolized using a Collison nebulizer (BGI, Waltham, MA) at 15 psi air pressure. The Collison nebulizer generated droplets with an approximate volume mean diameter of $2 \mu\text{m}$. The particle diameter after the water evaporated depended on the solids content of the suspension. Particle size was determined by the size of the suspended particles. Prior experience has shown that the bacterial organism aerosols generated by this procedure are primarily singlets.

3.3 Sampling the Bioaerosols

All the bioaerosols was collected in liquid impingers, AGI-4 (Ace Glass Inc., Vineland, NJ). Because exposure to UV radiation is a common environmental hazard, cells have developed a number of repair mechanisms to counteract UV-induced damage that must be considered when experimentally measuring UV effects. Collecting in impinger fluid maximized the collection of damaged organisms. After sampling, the impinger fluid was plated and incubated at appropriate times and temperatures for the test organism being used. To quantify the microbial counts, the plates were incubated at the appropriate temperature and time for the test organism (overnight to a week). Colonies or plaques were counted.

3.4 Bioaerosol Control Efficiency Calculation

The airborne inactivation efficiency was then calculated as:

$$\text{Airborne Inactivation Efficiency}(\%) = 100(1 - \text{Survival Rate}_{\text{corrected}}) \quad (\text{Equation 1})$$

The calculation of the test organism survival rate (culturable transmission) was based on the ratio of the downstream to upstream culturable organism counts. Calculation details are based on IEST Recommended Practice CC007.2.⁽¹⁰⁾ To remove system bias, the Survival Rate was corrected by the results of the blank no-light transmission test. The no-light transmission rate (light was not turned on in the test duct) was calculated as the survival rate test but using the culturable organism counts results of the no-light tests.

3.5 Calculation of the Average Dose Delivered by the Device

The equation used to describe the effect of UV on a single species population of airborne microorganisms is:

$$N_t/N_0 = \exp(-k \cdot \text{dose}) \quad (\text{Equation 2})$$

where:

- N_t = the number of microorganisms at time t ,
- N_0 = the number of microorganisms at the start,
- k = a microorganism-dependent rate constant, in $\text{cm}^2/\mu\text{W}\cdot\text{s}$,
- dose = $E_{\text{eff}} \cdot \Delta t$, in $\mu\text{W} \cdot \text{s}/\text{cm}^2$,
- E_{eff} = the average effective (germicidal) irradiance received by an organism, in $\mu\text{W}/\text{cm}^2$, and
- Δt = exposure duration for the organism.

The fractional inactivation achieved by the device is $(1-N_t/N_0)$, as indicated in Equation 1.

As we are only concerned with the UVG, the irradiance measured at a given point is the light energy (μW) of 254 nm radiation per unit area (cm^2). E_{eff} represents the average irradiance experienced by a particle as it passes through the infinite number of points/planes representing the average particle trajectory through the device. Since it is impossible to measure the irradiance at every point within the device and to measure the trajectory of each individual microorganism, E_{eff} must be calculated. This is done by rearranging equation 2 to yield

$$\text{Dose} = \frac{\ln(1 - N_t/N_0)}{k} \quad (\text{Equation 3})$$

Mean dose was computed from Equation 3 using the values of N_t and N_0 obtained with *B. atrophaeus* and using the organism-specific value of k for this organism ($1.6 \times 10^{-4} \pm 0.3 \times 10^{-4} \text{ cm}^2/\mu\text{W}\cdot\text{s}$). *B. atrophaeus* was selected for determining dose as discussed in the test plan.

The UV dose calculated in this manner is the mean dose to a single organism having an “average” trajectory through the device. It is reported here as an important characteristic of the device being tested. Dose is shown as a mean and a range plus standard deviation, reflecting the natural variation in a population of microorganisms.

A value for the average residence time in the device, Δt , is also reported. The reported value for Δt is the bulk air residence time in the device (volume of device divided by volumetric air flow rate), thus assuming, on average, a straight-path trajectory through the device. The “volume” of the device was assumed to be the volume of ducting extending from 1 m downstream of the lamp to 1 m upstream, accounting for irradiation of the organisms as they approached and flowed away from the lamp.

The computed average irradiance, E_{eff} , is also reported ($E_{\text{eff}} = \text{Dose}/\Delta t$), to indicate the relative roles of irradiance and residence time in determining the UV dose delivered by this device.

4.0 Quality Assurance/Quality Control

QA/quality control (QC) procedures were performed in accordance with the program QMP and the test/QA plan for this evaluation.^(11, 1)

4.1 Equipment Calibration

4.1.1 Reference Methods

As noted in Chapter 1, while reference methods were not available for determining the inactivation efficiency of the device, accepted methods developed and used in related work were used. Test specifications given in the appendices of the approved Test/QA Plan were derived from the related ASHRAE 52.2 method, with additional specifications and quality control checks relevant to this testing.^(1,8)

4.1.2 Instrument Checks

The Bio-Fighter 4Xtreme was installed in the test duct, and operated and maintained according to the vendor's instructions throughout the test. No maintenance was required during the test.

4.2 Audits

4.2.1 Performance Evaluation Audit

No PE audits were performed during this test.

4.2.2 Technical Systems Audit

The RTI Quality Manager conducted a combined QSA/TSA to ensure that the technology evaluation was performed in accordance with the approved test/QA plan and the TTEP QMP.^(1,10) Using a prepared checklist reflecting the Test/QA plan, the RTI Quality Manager reviewed task systems as well as technology-specific the sampling and analysis methods used, compared actual test procedures with those specified in the test/QA plan, and reviewed data acquisition and handling procedures.⁽¹⁾ Observations from this audit were documented and submitted to the RTI Task Manager. No significant findings were noted in this assessment that might impact the quality of the evaluation results. The records concerning the TSA are permanently stored with the RTI Task Manager.

The EPA Quality Manager conducted a combined QSA/TSA to independently assess conformance to the approved test/QA plan of project activities.⁽¹⁾ No significant findings were noted in this assessment that might impact the quality of the evaluation results. Minor recommendations were made and are being implemented.

4.2.3 Data Quality Audit

At least 10% of the data acquired during the evaluation was audited by the RTI Quality Manager who traced the data from the initial acquisition, through reduction and statistical analysis, to final reporting, to ensure the integrity of the reported results. All calculations performed on the data undergoing the audit were checked. This activity is summarized in a technology-specific report to the RTI Task Leader.

4.3 QA/QC Reporting

Each assessment and audit was documented in accordance with the test/QA plan.¹ Once the assessment report was prepared, the RTI Task Leader ensured that a response was provided as appropriate. For this technology evaluation, no significant findings were noted in any assessment or audit, and no follow-up corrective action was necessary.

The testing followed quality assurance and quality control requirements as given in the test/QA plan. The quality assurance officer reviewed the test results and the quality control data and concluded that the data quality objectives as shown in Table 4-1 and in Amendment 1 of the test/QA plan were attained.

Table 4-1. DQOs for Biological Aerosols

Parameter	Frequency and description	Control Limits								
Minimum upstream counts for samplers	Each efficiency test.	Minimum of 10 CFU ^a /plate or PFU ^b /plate								
Maximum counts for samplers	Each efficiency test.	Maximum of 500 CFU/plate or 800 PFU ^b /plate								
100% Penetration (correlation test)	Performed at least once per test sequence per organism	<table border="0"> <tr> <td>Test Organism</td> <td>Acceptable Penetration Range:</td> </tr> <tr> <td><i>Bg</i></td> <td>0.85 to 1.15</td> </tr> <tr> <td><i>S. marcescens</i></td> <td>0.80 to 1.20</td> </tr> <tr> <td>MS2</td> <td>0.75 to 1.25</td> </tr> </table>	Test Organism	Acceptable Penetration Range:	<i>Bg</i>	0.85 to 1.15	<i>S. marcescens</i>	0.80 to 1.20	MS2	0.75 to 1.25
Test Organism	Acceptable Penetration Range:									
<i>Bg</i>	0.85 to 1.15									
<i>S. marcescens</i>	0.80 to 1.20									
MS2	0.75 to 1.25									
Upstream CFUs	Each test. Statistical check of data quality.	CV ^c ≤ 0.25								
Upstream PFUs	Each test. Statistical check of data quality.	CV ^c ≤ 0.35								

^a CFU = colony forming units

^b PFU = plaque forming unit

^c CV = coefficient of variance

5.0 Test Results

The bioaerosol inactivation efficiency results, derived using Equation 1, are given in Table 5-1. Table 5-2 provides other information about the UV system.

Table 5-1. Inactivation Efficiency

	Test organism		
	Spore-forming bacteria (<i>B. atrophaeus</i>)	Vegetative bacteria (<i>S. marcescens</i>)	Bacterial virus (MS2 phage)
Inactivation efficiency, (UV light on) %	4	≥ 99	39

Table 5-2. Other information for the Bio-Fighter 4Xtreme, Model 21 Test

Attribute	Measured or Calculated Values
Test duct operating conditions	
Air flow rate	0.93 m ³ /sec (1970 cfm)
Inlet and outlet temperature.	Upstream 22.7 °C ^a (72.9°F) , Downstream 22.9 °C ^a (73.2 °F)
UV exposure conditions provided by device	
Mean dosage calculated from Equation 3 and range resulting from standard deviation of the literature k value	247 (208 – 304) μW-s/cm ²
Average exposure duration (Δt) in the device, based upon device volume and volumetric flow rate, and the particle-averaged E _{eff} computed from this Δt and derived dose	0.8 seconds assuming 2 meter exposure length (1 meter upstream and 1 meter downstream of lamp)
Particle-averaged irradiance E _{eff} computed as dose/Δt, mean and range resulting from standard deviation of dose	309 (260 -380) μW/cm ²
A single irradiance measurement at 254 nm	310 μW/cm ² at 162 cm (63 in.) from the lamp at 0.93 m ³ /sec (1970 CFM)
Measures of energy consumption by the unit	
Power consumed by the lamps/ballasts and by any ancillary equipment required by the vendor.	53 W
Pressure drop across the device	< 8 Pa ^b (0.03 in. H ₂ O)
Air temperature rise through the device	0.2 °C ^a (0.3 °F)

a – the accuracy of the thermometers are ±0.5 °C, therefore temperature variations below that are not necessarily significant).

b – the pressure drop was less than the maximum allowable pressure drop measurement for an empty test section as specified in ANSI/ASHRAE 52.2-1999.⁽⁸⁾

6.0 Performance Summary

This verification report addresses the inactivation efficiency performance (Table 5-1) for the Dust Free Bio-Fighter 4Xtreme, Model 21 ultra-violet light system that operates in an HVAC system. Other measures are given in Table 5-2. Users may wish to consider other performance parameters such as service life and cost when selecting a UV light system for their application.

The inactivation efficiencies calculated for the three organisms were 4% for *B. atrophaeus*, 99% for *S. marcescens* and 39% for MS2. The irradiance was measured as $310 \mu\text{W}/\text{cm}^2$ at 162 cm (63 in.) from the lamp with an airflow of $0.93 \text{ m}^3/\text{sec}$ (1970 CFM). The system had one lamp. The spore form of the bacteria *B. atrophaeus* is more resistant to being killed by UV than the vegetative bacteria *S. marcescens*.

7.0 References

1. RTI. 2005. *Test/QA Plan for Biological Inactivation Efficiency by HVAC In-Duct Ultraviolet Light Air Cleaners*. Research Triangle Institute, Research Triangle Park, NC.
2. VanOsdell, D. and K. Foarde. 2002. Final Report ARTI-21CR/610-40030-01 Project -Defining the Effectiveness of UV Lamps Installed in Circulating Air Ductwork, Air-Conditioning and Refrigeration Technology Institute, 4100 N. Fairfax Drive, Suite 200, Arlington, Virginia 22203.
<http://www.arti-21cr.org/research/completed/finalreports/40030-final.pdf>
3. Foarde, K. and J. Hanley. 2001. Determine the Efficacy of Antimicrobial Treatments of Fibrous Air Filters. *ASHRAE Transactions*. Volume 107, Part 1. 156-170.
4. Foarde, K.K. and J.T. Hanley. 1999. A New Laboratory Method for Measuring the Bioaerosol Filtration Efficiency of Air Cleaners. *Proceedings: 1999 Air Filtration Conference: Fall Topical Conference* pp. 47-54.
5. Foarde, K.K., J.T. Hanley, D.S. Ensor, and P.F. Roessler. 1999. Development of a Method for Measuring Single-Pass Bioaerosol Removal Efficiencies of a Room Air Cleaner. *Aerosol Science and Technology*. 30: 223-234.
6. Knight, V. 1973. *Viral and Mycoplasmal Infections of the Respiratory Tract*, Lea & Febiger, Philadelphia, PA.
7. Buckland, F.E., and Tyrell, D.A.S. 1962. Loss of Infectivity on Drying Various Viruses, *Nature* 195: 1063-1064.
8. ANSI/ASHRAE (American National Standards Institute/American Society of Heating, Refrigerating and Air-Conditioning Engineers). 1999. ANSI/ASHRAE Standard 52.2-1999, *Method of Testing General Ventilation Air-Cleaning Devices for Removal Efficiency by Particle Size*, Section 5.16.2, Atlanta, GA.
9. Adams, M.G. (1959). *Bacteriophages*. Interscience, New York.
10. IEST (Institute of Environmental Sciences and Technology). 1992. IEST-RP (Recommended Practice)-CC007, Testing of ULPA Filters, Rolling Meadows, IL.

11. Battelle. Quality Management Plan (QMP) for the Technology Testing and Evaluation Program (TTEP), Version 1, January 2005. Columbus, OH.